1. Open WorkHero and Tap "Scan2Pair (HID/SPP)".
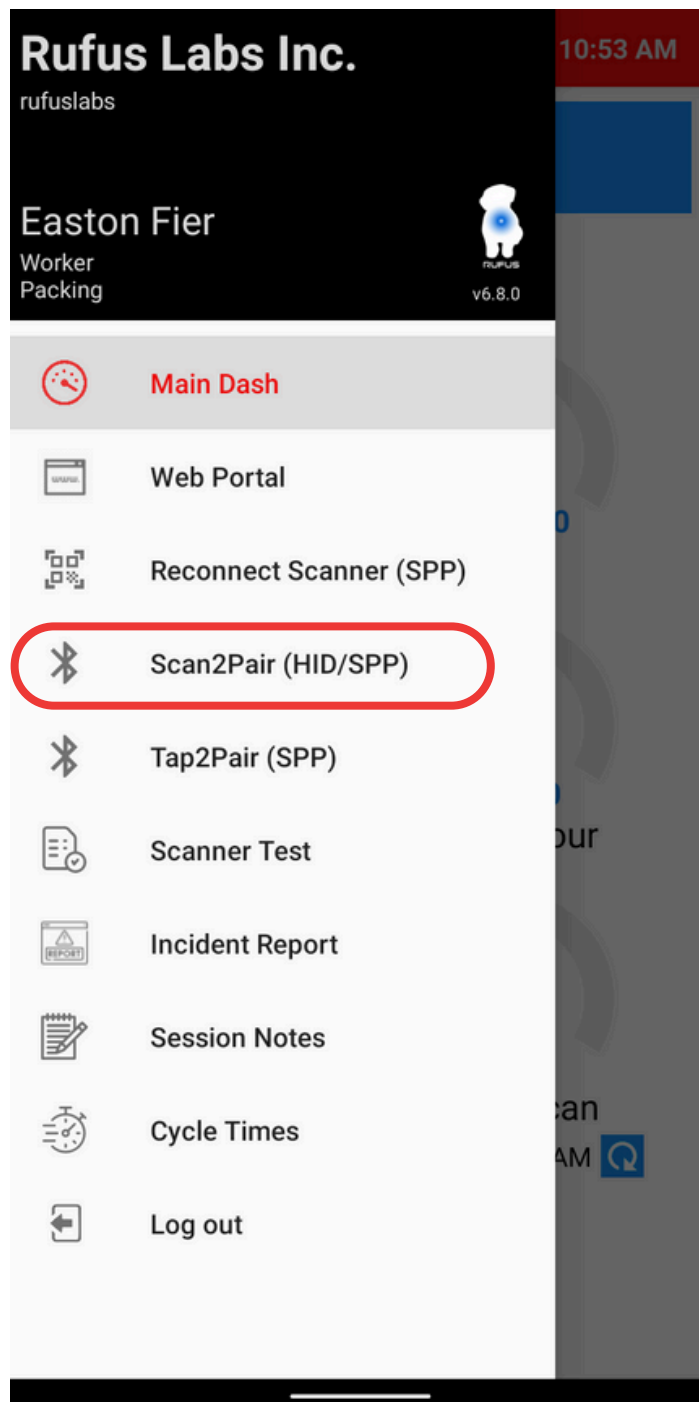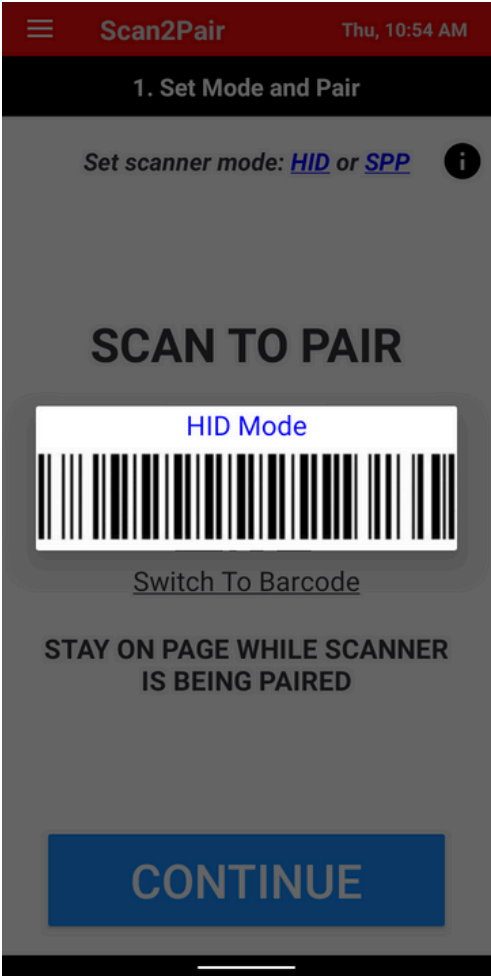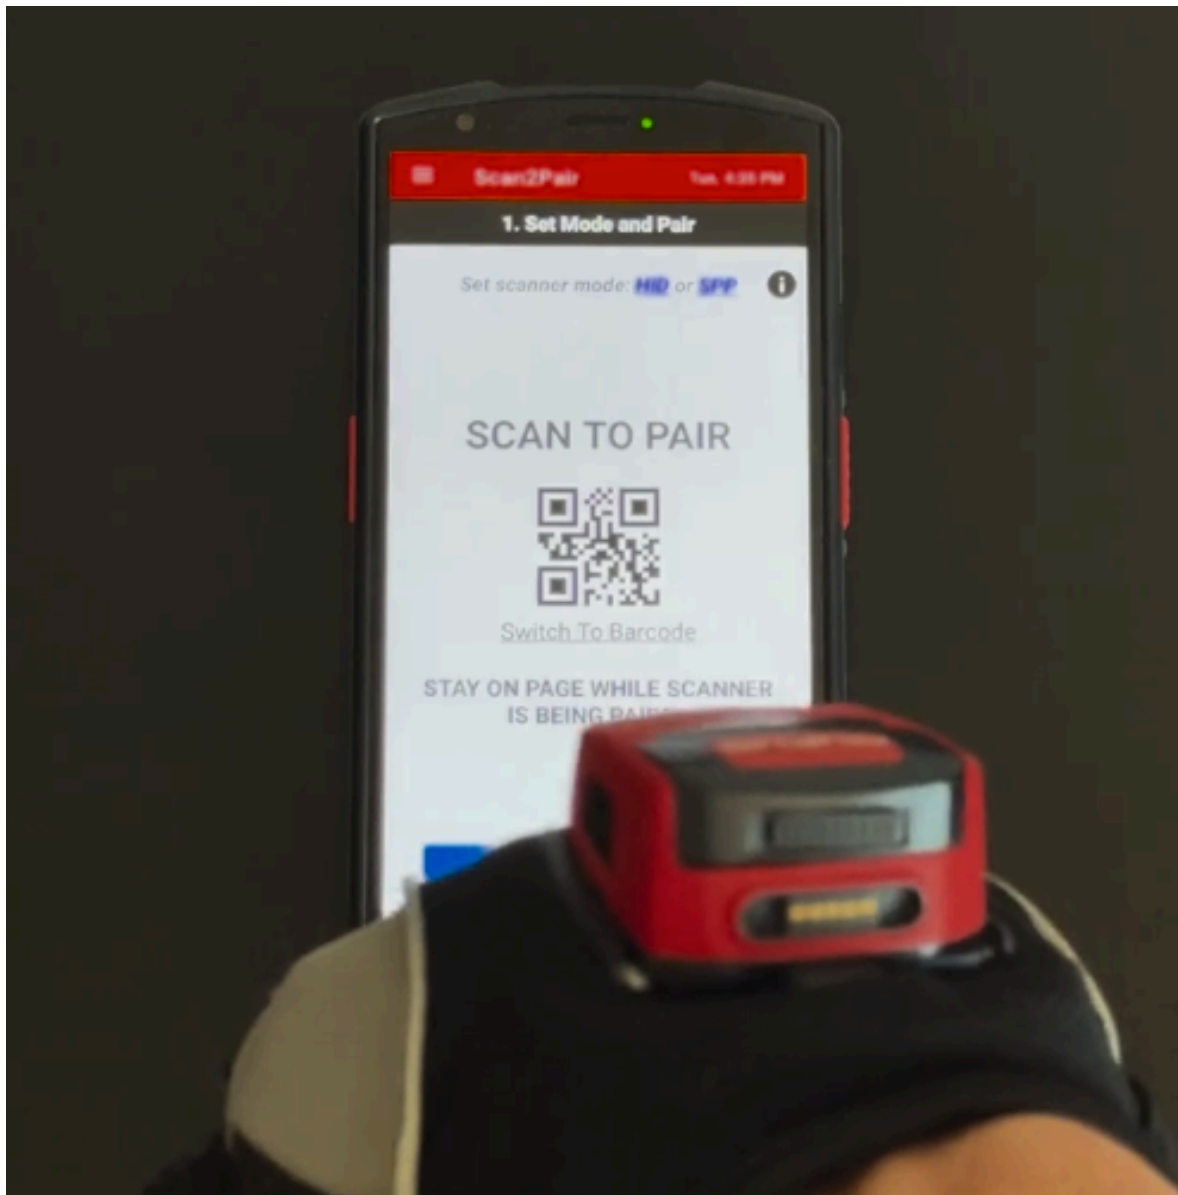
2. Tap "HID" in blue at the top of the screen.
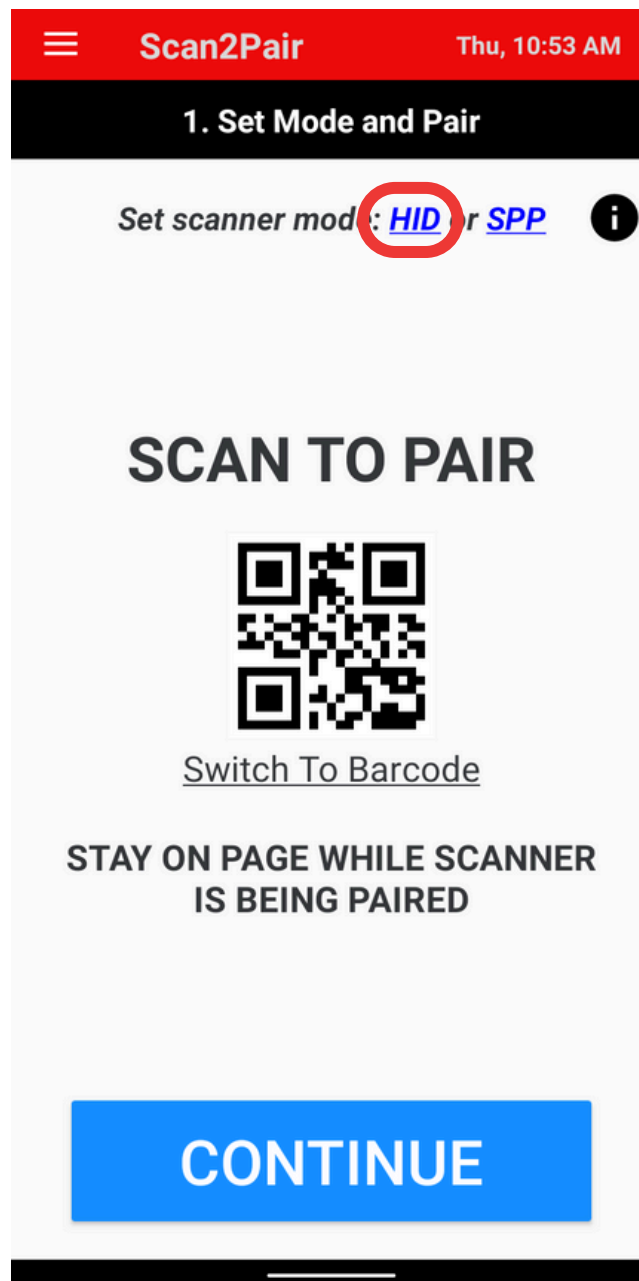
3. Scan the on-screen HID Mode barcode with your Rufus Scan2.

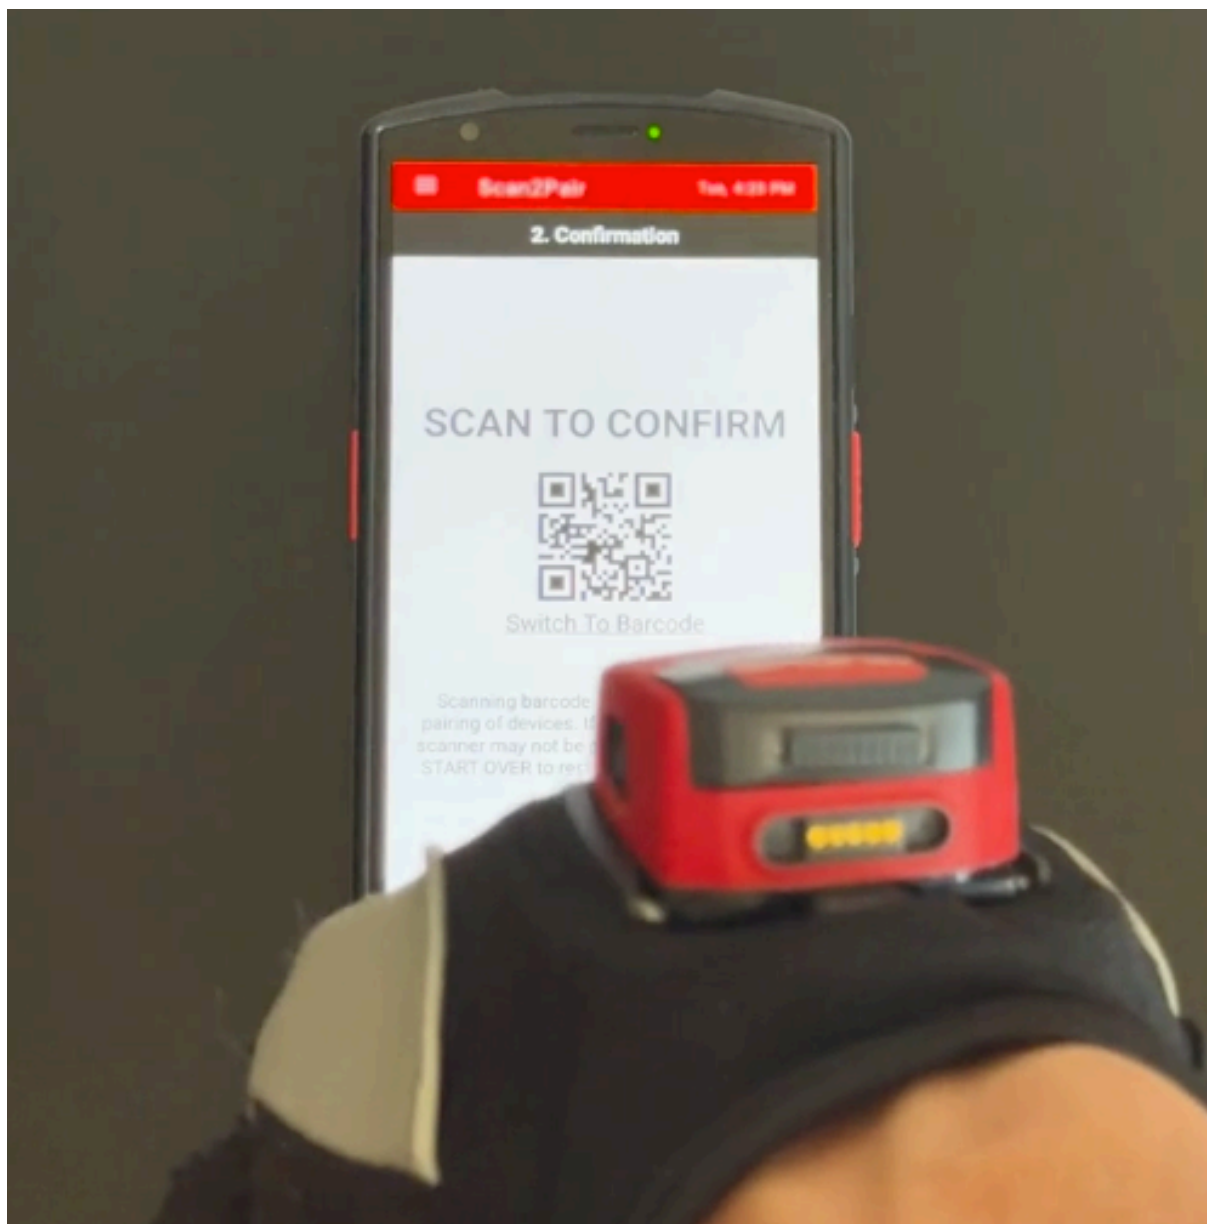# 4. Scan the "SCAN TO PAIR" QR code.

5. Scanner will beep 3 times and move to confirmation screen.

6. Scan on-screen QR code to confirm pairing.

7. Successful pairing message will appear, you're now connected!